

CLEAN & PROTECT your sun protection fabric



TEX' AKTIV CLEAN FABRIC CLEANER

Removes stains
and unpleasant odours.

TEX' AKTIV GUARD FABRIC WATERPROOFER

Protects fabrics from staining and soiling.
Prevents water and grease from penetrating fabrics.

DEEP-DOWN ACTION

COLOURLESS WATER-REPELLENT EFFECT.



RECOMMENDED BY DICKSON

for deckchair and cushion upholstery and for
blinds, sunshades, sail shades, and other sun protection solutions.

CLEANING

with TEX' AKTIV CLEAN

Clean awning frames and front bar to avoid soiling the fabric. Clean the awning frame with lightly soapy water. Clean the fabric by brushing towards the awning opening. Do not brush across the fabric as this may stress seams.

1 Use a soft brush to remove dirt. For stubborn stains, scrub lightly.

2 Spray TEX' AKTIV CLEAN and leave on for 5 minutes.

3 Gently scrub the fabric with a brush to let the product penetrate between fibres.

4 Rinse thoroughly with a hose. Do not use pressurised water.

5 Rewind when dry.

WATERPROOFING

With TEX' AKTIV GUARD

After cleaning with TEX' AKTIV CLEAN, apply TEK' AKTIV GUARD to re-waterproof fabric and protect from soiling.

1 Spray TEX' AKTIV GUARD on clean and dry fabric.

2 Spray lightly across fabric in both directions for an even, optimal effect.

3 Rewind when dry.

PLEASE NOTE: the coating is fully effective a few days after application; exposure to hot sun helps activate the coating. If an additional re-waterproofing is required, repeat the operation another day.

Outdoor fabrics are waterproofed with a special coating during production. This increases resistance to water and dirt (dust, plant particles, tree sap, insects, light oily deposits, etc.) and prevents mould.

As the original coating may become less effective over time, clean and treat outdoor fabrics regularly.

Find all our products on [dickson-eshop.com](https://www.dickson-eshop.com)